




Manual do usuário
Elite Bass Headphone
Fone de ouvido supra-auricular

Especificações técnicas:

- Até 25 horas de reprodução contínua / 22 horas de chamada / 120 horas de espera.
- Bateria recarregável embutida com tempo de carregamento médio de duas horas e meia.
- Bluetooth™ versão 5.0.
- Frequência: 20Hz - 20kHz.
- Sensibilidade: 105 +/- 3dB
- Impedância: 64 Ohm S.P.L (a 1KHz).
- Conectividade até 10m*.
- Capacidade de bateria: 350 mAh.
- Som estéreo.
- Diâmetro do alto-falante: 70 mm.

*A conectividade pode variar dependendo de interferências do ambiente, como paredes, rede wireless, entre outros.

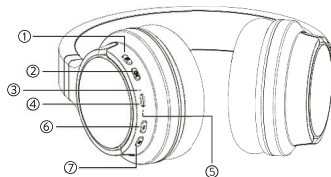

- | | |
|---------------------------|-----------------------------------|
| 1 - Botão de liga/desliga | 5 - Microfone |
| 2 - Assistente de voz | 6 - Botão + (volume e passar) |
| 3 - Luz de LED | 7 - Botão - (volume e retroceder) |
| 4 - Porta Micro USB | |

Carregando o seu fone:

- Conecte o cabo micro USB no fone de ouvido e conecte o outro ponto USB em uma porta USB compatível com esta entrada.
- Uma luz vermelha permanecerá acesa enquanto o fone de ouvido estiver carregando.
- A luz de LED ficará azul quando a carga estiver completa.
- O tempo de carregamento é de aproximadamente 2 horas e meia.

Ligar e desligar o fone de ouvido:

- Para ligar o fone, mantenha o botão de liga/desliga pressionado durante 4 segundos. Ele emitirá um aviso sonoro e a luz de LED irá piscar azul e vermelha.
- Para desligar, aperte e mantenha o botão de liga/desliga pressionado durante 4 segundos e a luz de LED apagará.

Conectando o fone a um novo aparelho:

- Ligue o fone de ouvido wireless.
- Para sincronizar o fone com um novo dispositivo, espere que a luz pisque azul e vermelho, isso significa que ele está pronto para ser sincronizado.
- Para sincronizar o smartphone compatível com Bluetooth™, um tablet ou outro reproduzidor de mídia, vá ao menu de ajustes de Bluetooth™ do aparelho, ative a função e a busca por um novo dispositivo irá iniciar.

- Depois de alguns segundos, você verá o seguinte código: IWILL ELTH.
- Toque para selecionar este modo. Quando o dispositivo emparelhar com sucesso, acenderá uma luz de LED azul no fone de ouvido.
- Esse fone irá conectar-se automaticamente com o último dispositivo Bluetooth™ ao qual estava pareado, sempre que seu dispositivo estiver com o modo Bluetooth™ ligado e tenha cobertura.

Nota: Se os fones de ouvido estiverem inativos durante 5 minutos, eles desligarão automaticamente para economizar a bateria.

Usando o fone:

- Após o fone estar conectado, abra seu aplicativo de música. Pressione o botão de ligar e desligar uma vez para reproduzir/pausar a música e atender ligações.
- Pressione duas vezes para ligar ao último número discado.
- Mantenha pressionado para rejeitar uma chamada.
- Pressione o botão + para passar uma música e mantenha-o pressionado para aumentar o volume.
- Pressione o botão - para retroceder uma música e mantenha-o pressionado para diminuir o volume.
- Todo o áudio, incluindo música, jogos, vídeos e notificações serão enviados através do fone de ouvido.
- Pressione o botão para iniciar o assistente de voz.

Dúvidas frequentes:

Sem bateria: Conecte o fone de ouvido sem fio ao cabo micro USB. Em seguida, se isso não funcionar, tente usar um cabo micro USB diferente.

A música não reproduz através do fone Bluetooth™: Certifique-se de que o seu dispositivo Bluetooth™ tenha perfil A2DP. Verifique se os dispositivos estão sincronizados e conectados através do Bluetooth™. Reinicie o fone de ouvido e volte a conectar o dispositivo Bluetooth™.

O dispositivo Bluetooth™ não se conecta com os fones: Certifique-se de que a versão Bluetooth™ do aparelho é compatível com a do fone. Caso já tenha conectado o fone anteriormente, selecione no menu de ajustes do Bluetooth™ de seu dispositivo este código: IWILL ELTH, e selecione “Esquecer”. Agora siga os passos para voltar a sincronizar o dispositivo.

NOTA: Este equipamento não está sujeito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

Este produto precisa ser recarregado ao menos uma vez a cada três meses, mesmo que sem uso, para garantir a saúde de sua bateria.

Cuidados e manutenção:

- Não derrube, não aplique força excessiva aos controles e não coloque objetos pesados sobre o alto-falante.
- Não tente consertar, desmontar ou modificar o

fone, você pode perder a garantia e gerar danos ao produto. Não há peças que possam ser reparadas pelo usuário.

- Se você não usar o fone por longos períodos de tempo, guarde-o em local seco, livre de temperaturas extremas, umidade e poeira.

- Mantenha este produto longe de qualquer fonte de calor.

- Não use este aparelho perto de um campo magnético forte.

- Não use fontes de energia sem aprovação dos órgãos responsáveis ou incompatíveis com este produto, isso pode causar falhas em seu funcionamento, incêndios, explosões e outros danos.

- Não use o produto em temperaturas abaixo de -10°C e acima de 55°C. Temperaturas extremas podem causar danos ao dispositivo, falhas na utilização, incêndios e explosões.

- Mantenha o produto seco. Chuva ou umidade de qualquer tipo podem causar danos aos circuitos internos.
- Não utilize detergente, álcool e outros produtos de limpeza para fazer a higienização do produto. Utilize apenas um pano macio e seco.

- Caso tenha problemas com o produto, entre em contato com nosso setor de garantias através do site www.iwill.com.br ou pelo e-mail rma@iwill.com.br.

- Isso não é um brinquedo. Mantenha longe de crianças para evitar acidentes.

Garantia:

Fornecemos garantia de 12 meses a partir da compra do produto considerando que ele não tenha sido aberto/alterado durante esse tempo e que o produto tenha sido utilizado conforme o descritivo deste manual. A garantia não cobre queda acidental ou danos referentes à má utilização do produto. A garantia é intransferível e válida apenas para utilização pessoal, não categorizando utilização comercial do produto. A iWill se reserva ao direito de arrumar ou trocar partes danificadas do produto. A garantia de 12 meses, contempla os três meses de garantia legal.

A garantia é válida caso:

Haja algum defeito de fábrica/funcionamento do produto dentro do prazo estabelecido neste manual. É de responsabilidade da empresa consertar e/ou trocar o produto, desde que ele não tenha sido alterado pelo usuário. A empresa fabricante e a exportadora não são responsáveis por nenhum compromisso feito com o usuário por parte de terceiros, que não estejam descritos neste manual ou na embalagem do produto, tanto sobre a garantia quanto sobre o produto. A empresa não é responsável pela falha no funcionamento do produto caso ele tenha sido exposto a alguma utilização indevida, conforme as descritas neste manual.

Mantenha este manual para futuras referências.



Dura mais, simples assim.



@iwillbrasil

Modelo: IWILL ELTH
Número Anatel 06090-18-11051




User Manual
Elite Bass Headphone
Headphone

Technical specifications:

- Up to 25-hour playtime / 22-hour call time / 120-hour standby.
- In-built rechargeable battery, charging time approximately two and a half hours.
- Bluetooth™ version 5.0.
- Frequency: 20Hz - 20kHz.
- Sensibility: 105 +/- 3dB.
- Impedance: 64 Ohm S.P.L (at 1KHz).
- Connectivity up to 10m*.
- Battery capacity: 350 mAh.
- Stereo sound.
- Ear cup diameter: 70mm.

*Connectivity may vary depending on interference from the environment, such as walls, wireless networks, among others.

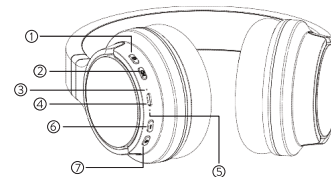

- | | |
|---------------------|--------------------------------|
| 1 - On/off button | 5 - Microphone |
| 2 - Voice assistant | 6 - Button + (volume and skip) |
| 3 - LED indicator | 7 - Botão - (volume and back) |
| 4 - Micro USB port | |

Charging the headphone:

- Connect the micro USB cable to the headphone and connect the other USB point to a compatible USB port with this input.
- The indicator lights red when the headset is charging.
- The LED indicator turns blue when charging is complete.
- Charging time is approximately two and a half hours.

Turning on and off the headphone:

- Press and hold the on/off button for 4 seconds.
- The headphone will emit a sound, and a LED light will illuminate, flicking two colors.
- Press and hold the on/off button for 4 seconds to turn off the earphone, and the indicator will go out.

Connecting your phone to a new device:

- Turn on the wireless headphone.
- To synchronize the headphone with a new device, wait for the light to blink blue and red it is ready to sync.
- To synchronize your Bluetooth™ to a compatible smartphone, tablet, or other media player, go to the Bluetooth™ settings menu on your device, activate the function, and the search for a new device will start.
- After few seconds, you will see the following code: IWILL ELTH.
- Touch to select this mode. When the device successfully pairs, a blue LED light will illuminate.
- This headphone will automatically reconnect to the

last Bluetooth™ device whenever your device is with Bluetooth™ mode turned on and in range.

NOTE: If the headphone is idle for 10 minutes, it will turn off automatically to conserve battery power.

Using the headphone:

- After connected, open your favorite music app. Press the on/off button once to play/pause the music or answer calls.
- Press the on/off button twice to call the last number called. Press and hold it to reject an incoming call.
- Press the + button to skip a song and hold to increase volume.
- Press the - button to go back a song and hold to decrease volume.
- All audio, including music, games, videos, and notifications will be sent through the headset.
- Press the button to start the voice assistant.

FAQ:

No battery: Connect the Bluetooth™ wireless headset to the micro USB cable. If that doesn't work, try to use another cable.

Music does not play through the Bluetooth™ headphone: Make sure your Bluetooth™ device has an A2DP profile. Make sure devices are synced and connected through Bluetooth™. Reboot the headphone and reconnect the

Bluetooth™ device.

The Bluetooth™ device does not connect with the headphone: Make sure the Bluetooth™ version of the device is compatible with the Bluetooth™ version of the headphone. In case you have already connected the headphone with your device, select the code: IWILL ELTH in the Bluetooth™ settings menu of your device, and select the option "Forget". Now follow the steps to re-sync the device.

NOTE: This equipment is not liable to protection from harmful interference and may not cause interference with duly authorized systems.

This product needs to be recharged at least once every three months, even without use, to preserve the health of its battery.

Safety instructions:

- Do not use detergent, alcohol, and other cleaning products to clean the product. Use a soft, dry cloth.
- Do not drop, apply excessive force to the controls, or place heavy objects on top of the headphone.
- Do not attempt to repair, disassemble or modify the product. There are no parts inside the headphone that can be fixed by the user. You can lose the warranty.
- Children should be supervised to ensure that they do not play with the product.
- If you do not use the headphone for long periods,

store it in a dry place, free from extreme temperatures, humidity, and dust.

- Keep the headphone away from any source of heat.
- Do not use this device close to a strong magnetic field.
- Do not use energy sources that are not approved by government agencies or are incompatible with this product, this could cause failures in its functions, fire, explosion, or other damages.
- Do not use this product at temperatures below -10°C or above 55°C. If the environment has extreme temperatures it could cause damages to the product, such as malfunction, fire, or explosion.
- Keep the device dry. Rain or humidity could cause damage to the internal circuit.
- Do not use soap, alcohol, or other cleaning products to clean this product. Use only a clean, soft cloth.
- Do not drop, throw, pull, knock or drag this product, it may cause damages to the device.
- Do not modify or disassemble the product and its accessories without factory approval, you may lose the warranty and cause damage to the product and its accessories.
- If you have problems with the product, please contact our warranty by e-mailing rma@iwill.com.br or through our website www.iwill.com.br.
- This is not a toy. Keep away from children to prevent accidents.

Warranty:

We provide a 12-month warranty from the purchase of the product, provided that it has not been opened/changed during this time and that the product has been used as described in this manual. The warranty does not cover accidental dropping or damage due to misuse of the product. The warranty is non-transferable and is valid only for personal use, not categorizing commercial use of the product. iWill™ reserves the right to repair or replace damaged parts of the product. The 12-month warranty includes the three-month legal warranty.

The warranty is valid when:

If there is a defect in the factory/operation of the product within the timeframe outlined in this manual, it is the responsibility of the company to repair and/or replace the product, provided that it has not been altered by the user in any way. The manufacturer and exporter are not responsible for any third-party agreement made with the user apart from the described in this manual or the product packaging, both on the warranty and the product. The company is not responsible for any failure to operate the product if it has been exposed to any improper use, as described in this manual.

Keep this manual for future references.



Lasts longer, simple like that.



Model: IWILL ELTH
Anatel number 06090-18-11051