

User manual




ELLA DOCK Multifunctional radio alarm clock

Technical specification:

- Up to 7 hours* of nonstopping playback.
- 2 speakers with 5W each. Total 10W.
- 2000mAh battery.
- Total charging time about 4 hours.
- Bluetooth v5.0.
- Frequency resonance: 100Hz - 16Khz.
- S/N Ratio: ≥ 80db.
- Speaker driver: 52mm.
- Wireless charging area with up to 15W power.
- USB charge output: 5V/1A.
- USB-C input: 9V/2A
- Charging efficiency: 70%.
- Charging distance: ≤ 8mm.
- Clock and alarm function.
- Radio function.
- White noise sleep aid.

* Time may vary depending on use.

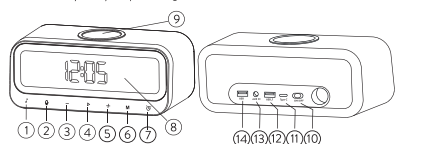

- | | |
|----------------------------------|-----------------------------|
| 1. AUX play | 8. Time display |
| 2. Voice assistant | 9. Wireless charging area |
| 3. Volume decrease/previous song | 10. Switching power supply |
| 4. Play/pause button | 11. Charging port |
| 5. Volume up/next song | 12. USB disk port |
| 6. Mode | 13. AUX input port |
| 7. Clock and alarm | 14. DC-5V power output port |

Charging:

When battery is low, a audible warning will sound. Plug the USB-C cable into the USB-C port behind the device and plug the other end of the cable into a power source. While charging a LED will light up on the display. When the battery is full the LED will go out.

Using the product

To achieve full performance of your Ella Speaker, a minimum power input of 18w is required.

Wireless charger:

- Make sure your phone is compatible with wireless charging.
- First plug the wireless charger using the included USB-C cable into the USB-C port of a power source. Please note charging speeds depends on the input power into the wireless charger.
- Place your mobile phone on the charging pad. You can check the charging status on the screen of your phone.

Turning on/off:

Switch the button ON/OFF on the back of the device until you hear a sound or see the display light in response to turn it on/off.

Connecting to a new device:

To pair your mobile device with the speaker, turn on the Ella Speaker and press the (M) button, a light will start flashing on the display. Select “ELLA SPEAKER IWILL” on your mobile device to pair with the speaker, when the devices are paired, the white light will stop flashing.

You only need to connect to Bluetooth once. Turning the speaker on again will automatically connect the speaker to your device, providing that the Bluetooth is on. The sound box reconnects to the last connected device. If this does not occur, open the Bluetooth settings and select the ELLA SPEAKER IWILL” from the list of paired devices.

Playing:

You can play your favorite songs by connecting your device via Bluetooth, via AUX cable or in the USB disk port. You can control the music through your device or directly on Ella Speaker.

To play songs via AUX cable, connect your device with the cable in the AUX input and press (M).

To control the music on Ella Speaker, quickly press (▶) to pause or play the song, quickly press (◀) button to decrease the volume or press and hold to return to previous song, quickly press (⊕) button to increase the volume or press and hold to skip to next song.

Clock:

To set time*, quickly press (⊕) button and the hour display will start to blink, set the correct hour by pressing (◀) or (⊕) buttons. To set the minutes, quickly press (⊕) button again and the minutes display will start blinking, set the correct time and press (▶) to set it.

*Ella Speaker is compatible with iPhones and some Android devices, and when connected via Bluetooth, the clock will automatically calibrate the time. Not all Androids are supported to automatically clock setting.

Alarm clock:

To set an alarm clock, press and hold (⊕) button until the

display switches to 00:00. Set the hour by pressing (◀) or (⊕) buttons, then quickly press (⊕) button to set the minutes. Set the correct time and press (▶) to save it. You can program a second alarm by repeating the same process. After saving the second alarm, the time display should show two clock-shaped LEDs indicating the number of programmed alarms.

After programming the two alarms, they can be deactivated by pressing the (⊕) until the corresponding LED goes off on the display.

When the alarm goes off, press (▶) to turn it off.

Radio:

To turn the radio on, press (M) button. You can automatically search the radio stations available by pressing and holding (▶) button, at the end of the process, the stations will be set, to choose one station, press and hold (◀) or (⊕) buttons.

NOTE: For optimal radio performance, connect an auxiliary cable to your Ella Speaker to serve as an antenna.

Voice Assistant

Press the button (🎤) once to call the voice assistant. When receiving a call, press the button (🎤) once to answer the call and press it again to end the call. To reject the call, press the button (🎤) twice.

White noise:

Press (🔊) to activate white sounds mode, to choose between the 8 different options, press (◀) or (⊕) for a few seconds.

Problems solutions:

No power:

First, recharge your speaker using the included charging cable. Then, try to use a different USB-C cable.

Music is not playing over Bluetooth:

Make sure your Bluetooth device has A2DP profile. Check if both devices are paired and connected over Bluetooth. Restart the speaker to reconnect your Bluetooth device.

Bluetooth device will not reconnect with the speaker:

Navigate to your Bluetooth settings menu on your Bluetooth device, tap “ELLA SPEAKER IWILL”, and select “Forget device”. Now follow the steps to pair your device again.

Safety instructions:

- Do not use detergents, soap, alcohol, or other cleaning products to clean the product. Use a clean, soft, dry cloth.
- Do not drop, throw, pull, hit, or drag this product. Do not apply excessive force to the controls or place heavy objects on top of the speaker, as this may cause damage to the device.
- Do not modify or disassemble the transmitter and its accessories without factory approval, as you may void the warranty and cause damage to the transmitter and its accessories.
- Children should be supervised to prevent them from playing with the product.
- If you will not be using the product for long periods, store it in a dry location free from extreme temperatures, humidity, and dust.

Problems solutions:

No power:

First, recharge your speaker using the included charging cable. Then, try to use a different USB-C cable.

Music is not playing over Bluetooth:

Make sure your Bluetooth device has A2DP profile. Check if both devices are paired and connected over Bluetooth. Restart the speaker to reconnect your Bluetooth device.

Bluetooth device will not reconnect with the speaker:

Navigate to your Bluetooth settings menu on your Bluetooth device, tap “ELLA SPEAKER IWILL”, and select “Forget device”. Now follow the steps to pair your device again.

Safety instructions:

- Do not use detergents, soap, alcohol, or other cleaning products to clean the product. Use a clean, soft, dry cloth.
- Do not drop, throw, pull, hit, or drag this product. Do not apply excessive force to the controls or place heavy objects on top of the speaker, as this may cause damage to the device.
- Do not modify or disassemble the transmitter and its accessories without factory approval, as you may void the warranty and cause damage to the transmitter and its accessories.
- Children should be supervised to prevent them from playing with the product.
- If you will not be using the product for long periods, store it in a dry location free from extreme temperatures, humidity, and dust.

Problems solutions:

No power:

First, recharge your speaker using the included charging cable. Then, try to use a different USB-C cable.

Music is not playing over Bluetooth:

Make sure your Bluetooth device has A2DP profile. Check if both devices are paired and connected over Bluetooth. Restart the speaker to reconnect your Bluetooth device.

Bluetooth device will not reconnect with the speaker:

Navigate to your Bluetooth settings menu on your Bluetooth device, tap “ELLA SPEAKER IWILL”, and select “Forget device”. Now follow the steps to pair your device again.

Safety instructions:

- Do not use detergents, soap, alcohol, or other cleaning products to clean the product. Use a clean, soft, dry cloth.
- Do not drop, throw, pull, hit, or drag this product. Do not apply excessive force to the controls or place heavy objects on top of the speaker, as this may cause damage to the device.
- Do not modify or disassemble the transmitter and its accessories without factory approval, as you may void the warranty and cause damage to the transmitter and its accessories.
- Children should be supervised to prevent them from playing with the product.
- If you will not be using the product for long periods, store it in a dry location free from extreme temperatures, humidity, and dust.

Problems solutions:

No power:

First, recharge your speaker using the included charging cable. Then, try to use a different USB-C cable.

Music is not playing over Bluetooth:

Make sure your Bluetooth device has A2DP profile. Check if both devices are paired and connected over Bluetooth. Restart the speaker to reconnect your Bluetooth device.

Bluetooth device will not reconnect with the speaker:

Navigate to your Bluetooth settings menu on your Bluetooth device, tap “ELLA SPEAKER IWILL”, and select “Forget device”. Now follow the steps to pair your device again.

Safety instructions:

- Do not use detergents, soap, alcohol, or other cleaning products to clean the product. Use a clean, soft, dry cloth.
- Do not drop, throw, pull, hit, or drag this product. Do not apply excessive force to the controls or place heavy objects on top of the speaker, as this may cause damage to the device.
- Do not modify or disassemble the transmitter and its accessories without factory approval, as you may void the warranty and cause damage to the transmitter and its accessories.
- Children should be supervised to prevent them from playing with the product.
- If you will not be using the product for long periods, store it in a dry location free from extreme temperatures, humidity, and dust.



Thank you for choosing a iWill

Warranty:



@iwillbrasil
contato@iwill.com.br

Manual de usuário




ELLA DOCK

Rádio-relógio multifuncional

Especificações técnicas:

- Até 7 horas* de reprodução contínua.
- 2 alto-falantes com 5W cada. Total de 10W.
- Bateria de 2000mAh.
- Tempo total de carregamento de aproximadamente 4 horas.
- Bluetooth v5.0.
- Frequência de ressonância: 100Hz - 16Khz.
- Relação Sinal/Ruído: ≥ 80db.
- Driver do alto-falante: 52mm.
- Área de carregamento sem fio com até 15W de potência.
- Saída de carregamento USB: 5V/1A.
- Entrada USB-C: 9V/2A.
- Eficiência de carregamento: 70%.
- Distância de carregamento: ≤ 8mm.
- Função de relógio e alarme.
- Função de rádio.
- Auxílio de sono com ruído branco.

*O tempo pode variar dependendo do uso.

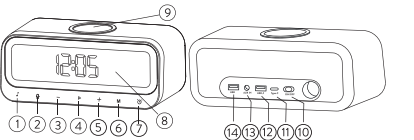

1. AUX play
2. Assistente de voz
3. Diminuir volume /música anterior
4. Play/pause
5. Aumentar volume /próxima música
6. Modo
7. Relógio e despertador
8. Visor
9. Área de carregamento Wireless
10. ON/OFF
11. Entrada USB-C
12. Entrada USB de mídia
13. Entrada para cabo auxiliar
14. Saída de energia USB DC-5V

Carregamento:

Quando a bateria estiver baixa, um aviso sonoro irá tocar. Conecte o cabo USB-C na porta USB-C na parte de trás do dispositivo e conecte a outra extremidade do cabo a uma fonte de energia. Durante o carregamento, um LED acenderá no visor. Quando a bateria estiver totalmente carregada, o LED se apagará.

Uso do produto:

Para obter o desempenho máximo do seu Ella Speaker, é necessário um mínimo de entrada de energia de 18W.

Carregador sem fio:

- Certifique-se de que seu telefone seja compatível com carregamento sem fio.
- Primeiro, conecte o carregador sem fio usando o cabo USB-C incluso na porta USB-C de uma fonte de energia. Observe que a velocidade de carregamento depende da potência de entrada no carregador sem fio.
- Coloque seu telefone celular no suporte de carregamento. Você pode verificar o status do carregamento na tela do seu telefone.

Ligando/desligando:

Ligue ou desligue deslizando o botão ON/OFF na parte de trás do dispositivo até ouvir um som ou ver a luz do visor responder.

Conexão com um novo dispositivo:

Para emparelhar seu dispositivo móvel com o alto-falante, ligue o Ella Speaker e pressione o botão BT, uma luz começará a piscar no visor. Selecione "ELLA SPEAKER IWILL" no seu dispositivo móvel para parear com o alto-falante. Quando os aparelhos estiverem pareados, a luz branca irá parar de piscar.

Você só precisa conectar o Bluetooth uma vez. Ao ligar o alto-falante novamente, ele se conectará automaticamente ao seu dispositivo, desde que o Bluetooth esteja ativado. A caixa de som se reconectará ao último dispositivo conectado. Se isso não ocorrer, abra as configurações do Bluetooth e selecione "ELLA SPEAKER IWILL" na lista de dispositivos pareados.

Reprodução:

Você pode reproduzir suas músicas favoritas conectando seu dispositivo via Bluetooth, cabo AUX ou na porta do disco USB. Você pode controlar a música através do seu dispositivo ou diretamente na Ella Speaker.

Para reproduzir músicas via cabo AUX, conecte seu dispositivo ao cabo na entrada AUX e pressione (M).

Para controlar a música na Ella Speaker, pressione rapidamente o botão (▶) para pausar ou reproduzir a música, pressione rapidamente o botão (◀) para diminuir o volume ou pressione e segure para voltar à música anterior, pressione rapidamente o botão (+) para aumentar o volume ou pressione e segure para pular para a próxima música.

Relógio:

Para ajustar o horário*, pressione o botão (⌚) e o visor de horas começará a piscar, ajuste a hora correta pressionando os botões (◀) ou (+). Para ajustar os minutos, pressione rapidamente o botão (⌚) novamente e o visor de minutos começará a piscar, ajuste o horário correto e pressione (▶) para salvar.

*A Ella Speaker é compatível com iPhones e alguns dispositivos Androides e, quando conectado via Bluetooth, o relógio será calibrado automaticamente. Nem todos os dispositivos Android são compatíveis com o ajuste

automático do relógio.

Despertador:

Para configurar o despertador, pressione e segure o botão (⌚) até o visor mudar para 00:00. Ajuste a hora pressionando os botões (◀) ou (+) e, em seguida, pressione rapidamente o botão (⌚) para ajustar os minutos. Ajuste o horário correto e pressione (▶) para salvar automaticamente.

Você pode programar um segundo alarme repetindo o mesmo processo. Após o segundo alarme salvo, o display de hora deve apresentar dois LEDs em formato de relógio indicando a quantidade de alarmes programados.

Após os dois alarmes programados, eles podem ser desativados apertando o botão (⌚) até o LED correspondente se apagar no display.

Quando o alarme disparar, aperte (▶) para desligá-lo.

Rádio:

Para ligar o rádio, pressione o botão (M). Você pode buscar automaticamente as estações de rádio disponíveis pressionando e segurando o botão (▶). Ao final do processo, as estações serão configuradas e para escolher uma estação, pressione e segure os botões (◀) ou (+).

OBS: Para um melhor funcionamento do rádio, conecte um cabo auxiliar a sua Ella Speaker para funcionar como antena.

Assistente de voz:

Pressione uma vez o botão (🗣️) para chamar o assistente de voz. Ao receber uma ligação pressione uma vez (🗣️) para atender a chamada e outra vez ao finalizar a ligação. Para rejeitar a ligação pressione (🗣️) duas vezes.

White noise:

Pressione (🎧) para ativar o modo de sons brancos, para escolher entre as 8 diferentes opções, pressione (◀) ou (+) por alguns segundos.

Soluções para problemas:

Sem energia:

Primeiro, recarregue seu alto-falante usando o cabo de carregamento incluso. Em seguida, tente usar um cabo USB-C diferente.

A música não está tocando via Bluetooth:

Certifique-se de que seu dispositivo Bluetooth possui o perfil A2DP. Verifique se ambos os dispositivos estão pareados e conectados via Bluetooth™. Reinicie o alto-falante para reconectar seu dispositivo Bluetooth.

O dispositivo Bluetooth não será reconectado ao alto-falante:

Acesse o menu de configurações Bluetooth em seu dispositivo Bluetooth, toque em "ELLA SPEAKER IWILL" e selecione "Esquecer dispositivo". Agora siga as etapas para parear seu dispositivo novamente.

Instruções de segurança:

- Não use detergentes, sabão, álcool ou outros produtos de limpeza para limpar o produto. Use um pano limpo, macio e seco.
- Não deixe cair, jogar, puxar, bater, arrastar este produto, não aplique força excessiva aos controles ou coloque objetos pesados em cima do alto-falante, pois isso pode causar danos ao dispositivo.
- Não modifique ou desmonte o transmissor e seus acessórios sem a aprovação da fábrica, pois você pode perder a garantia

e causar danos ao transmissor e seus acessórios.

- As crianças devem ser supervisionadas para evitar que brinquem com o produto.
- Se você não usar o produto por longos períodos, armazene-o em um local seco, livre de temperaturas extremas, umidade e poeira.
- Mantenha o alto-falante longe de fontes de calor.
- Mantenha os implantes médicos pelo menos a 20 cm de distância deste produto ou de qualquer implante médico que possa ser afetado por um campo magnético, como marca-passos.
- Não use este dispositivo próximo a um campo magnético forte.
- Não utilize fontes de energia não aprovadas por agências governamentais ou incompatíveis com este produto, pois isso pode causar falhas em suas funções, incêndio, explosão ou outros danos.
- Não use este produto em temperaturas abaixo de -10°C ou acima de 55°C. Se o ambiente tiver temperaturas extremas, isso pode causar danos ao produto, como mau funcionamento, incêndio ou explosão.
- Mantenha o dispositivo seco. Chuva ou umidade podem causar danos ao circuito interno.
- Se tiver problemas com o produto, entre em contato com a garantia enviando um e-mail para rma@iwill.com.br ou pelo nosso site.
- Este não é um brinquedo. Mantenha longe das crianças para evitar acidentes.

Observação:

- Leia atentamente este manual antes de usar o produto.
- Se a potência do adaptador de energia que você está usando

for maior que 7,5W, sugerimos usar um adaptador com saída de 5V/2A.

- É normal que este transmissor e seu dispositivo fiquem quentes em condições de operação e pode ficar mais quente ao carregar e usar o dispositivo ao mesmo tempo (como ouvir música).
- Mantenha uma distância de pelo menos 20 cm entre dispositivos médicos implantáveis (marca-passos, implantes cocleares, etc.) e o carregador sem fio para evitar possíveis interferências com o dispositivo médico.
- Não coloque barras magnéticas ou cartões com chip (como cartões de identidade ou cartões de crédito) muito perto do transmissor para evitar falhas no produto.
- Se você estiver usando uma capa protetora, isso pode influenciar o carregamento. Se isso ocorrer, remova a capa do seu smartphone e tente carregá-lo novamente.

Garantia:

Fornecemos garantia de 12 meses a partir da compra do produto considerando que ele não tenha sido aberto/alterado durante esse tempo e que o produto tenha sido utilizado conforme o descritivo deste manual. A garantia não cobre queda acidental ou danos referentes à má utilização do produto. A garantia é intransferível e válida apenas para utilização pessoal, não categorizando utilização comercial do produto. A iWill® se reserva ao direito de reparar ou substituir partes danificadas do produto. A garantia de 12 meses, contempla os três meses de garantia legal. É obrigatória a apresentação da nota fiscal para a validação da garantia.

A garantia é válida caso:

Haja algum defeito de fábrica/funcionamento do produto dentro do prazo estabelecido neste manual. É de responsabilidade da empresa consertar e/ou trocar o produto, desde que ele não tenha sido alterado pelo usuário. O fabricante e o importador não se responsabilizam por nenhum compromisso feito por terceiros, além dos descritos nesse manual ou na embalagem do produto, tanto para garantia quanto para o produto. A empresa não é responsável por qualquer falha de operação do produto caso ele tenha sido exposto a uso indevido, como o descrito nesse manual.

Mantenha este manual para futuras referências.

Valide sua Garantia:

Para cadastrar a garantia do seu produto, solicitar troca ou saber mais informações, acesse nosso site através do **QR Code** ao lado. O link também pode ser acessado através do site: www.iwill.com.br



Dura mais, simples assim.

Obrigado por escolher a iWill

Garantia:



Facebook icon @iwillbrasil
Twitter icon @iwillbrasil
Email icon contato@iwill.com.br